

Orion Fire Control Panel

Reset Alarm Instructions

STATUS	ZONES								CONTROLS	
● FIRE	●	●	●	●	●	●	●	●	BUZZER SILENCE	1
● FAULT	●	●	●	●	●	●	●	●	RESET	2
● DISABLED									LAMP TEST	3
● TEST									SOUNDERS ACTIVATE/ SILENCE	4
● SUPPLY										
● SYSTEM FAULT										
FAULTS	INSTRUCTIONS FOR CONVENTIONAL FIRE ALARM PANEL								DISABLEMENTS	
● SUPPLY FAULT	<div style="display: flex; justify-content: space-between;"> <div> <p>General User (Access Level 1) To silence internal buzzer press BUZZER SILENCE. To override active delays, during an alarm condition, press DELAYS ACTIVE.</p> <p>Authorized User (Access Level 2) To enter this level enter 4 digit code. Consult Manual for more details.</p> <p>EVACUATION Enter Authorised User Code (Access Level 2). Press SOUNDER (Activate/Silence). Repeat last step to SILENCE sounders.</p> </div> <div> <p>Fire Events Internal Buzzer sounds. System Status Fire LED is lit. Zones on Fire will have their respective Fire LED lit. To silence fire alarms: First enter authorised user code (Access Level 2). Press SOUNDER (Activate/ Silence) button.</p> <p>Fault Events Internal Buzzer Sounds. System Status Fault LED is lit. Each fault will be shown by its own LED being lit. Call service engineer.</p> </div> </div>								OUTPUTS AUXILIARY	
● BATTERY FAULT									DISABLE SOUNDERS	
● AUX. SUPPLY FAULT									SELECTED ZONES	
● EARTH FAULT									DELAYS ACTIVE	

Steps to reset a false alarm

1. Press Buzzer Silence button (1) once
2. Using control buttons enter code 2244
(supply led will flash green if code accepted)
3. Press Sounders activate/Silence button (4)

Replacement glass for call point in tool box in stores. Tool also available to open call point (screw at front bottom of call point)